

COASTER Instructions

****The on/off switch is bypassed****

Auto Mode:

Put all dip switches in the off/up position. The light will begin to move and change on its own.

Sound mode:

With only dip switch #9 in the on/down position the light will change color and move to the beat.

DMX:

If this is the first light in your DMX chain just put dip switch #10 to the on/down position. For this light dip switches 1-9 are reversed, meaning dip switch #9 has a value of 1 and dip switch #8 has a value of 2 and so on. Dip switch #1 has a value 256.

Channel #1 controls tilt

Channel #2 controls pan

Channel #3 controls colors

0-34 off

35-71 green

72-107 red

108-143 blue

144-179 yellow

180-215 aqua

216-251 purple

252-255 all LED's on

Channel #4 controls strobe 0-255 (fast-slow)

Master/Slave mode:

Set the first fixture to either sound active or auto mode. Then connect the second fixture via DMX cable. On the second fixture set dip switch #10 to the on position only. Then the lights will link up and move and change together.