

# SHARK Instructions

## **Instructions for Operation:**

Plug the power cord in and the LED's will come on and the ball will rotate.

Modes of operation: Automatic and sound active operation.

Automatic mode: All led's are on and the ball turns at a preset speed.

Sound active mode: All LED's are on and blink to the beat of the music while the ball turns continuously.

The knob located on the lower portion of the ball controls the sound sensitivity. Knob does not control rotation speed. Turn the knob all the way counter clockwise for Automatic mode. Slowly turn the knob clockwise for sound active mode. 100,000 hour led's. Includes a 1 amp short fuse. under 1 amp power draw.