

# TEKTON Instructions

## **Instructions for Operation:**

Fill the front bin containing the wands up to the fill line with bubble fluid (make sure the drain valve on the rear is closed).

There are two switches on the rear of the unit. The right switch is the manual On/Off switch. The switch on the left is the wireless remote on/off switch. With this switch on, you can use the wireless remote.

The wireless remote has 2 buttons: one is the "On" button the other is the "Off" button. The wireless remote will not work unless the proper switch is turned on. The wireless remote will also not work if the manual switch is active.

After use, there is a drain valve on the rear of the machine to drain out the excess fluid.

This machine uses approximately 1 gallon per hour.