

TOOBER Instructions

4 channel DMX dual moon LED effect light.

4 DMX channels: #1=Dimmer/Strobe, #2=Green, #3=Red, #4=Blue

Stand Alone mode features: Sound active with built in mic, Pattern change, Strobe, Rotation to sound.

Stand Alone Mode:

with only dip switch #1 on (down), green LED's come on at approximately 20%

with only dip switch #2 on (down), green LED's come on at approximately 30%

with only dip switch #1 & #2 on (down), green LED's come on at approximately 40%

with only dip switch #3 on (down), green LED's come on at approximately 60%

with only dip switch #1 & #3 on (down), green LED's come on at approximately 70%

with only dip switch #2 & #3 on (down), green LED's come on at approximately 80%

with only dip switch #1 & #2 & #3 on (down), green LED's come on at approximately 100%

with only dip switch #1 on (down), red LED's come on at approximately 20%

with only dip switch #2 on (down), red LED's come on at approximately 30%

with only dip switch #1 & #2 on (down), red LED's come on at approximately 40%

with only dip switch #3 on (down), red LED's come on at approximately 60%

with only dip switch #1 & #3 on (down), red LED's come on at approximately 70%

with only dip switch #2 & #3 on (down), red LED's come on at approximately 80%

with only dip switch #1 & #2 & #3 on (down), red LED's come on at approximately 100%

with only dip switch #7 on (down), blue LED's come on at approximately 40%

with only dip switch #8 on (down), blue LED's come on at approximately 60%

with only dip switch #7 & #8 on (down), blue LED's come on at approximately 100%

with only dip switch #7 & #9 on (down), scrolls through colors automatically. Rotation is sound active.

with only dip switch #1 & #9 on (down), strobe feature. Rotation is sound active.

with only dip switch #9 on (down), faster strobe feature. Rotation is sound active.

with only dip switch #1 & #2 & #3 & #9 on (down), Scroll through colors by fading slowly in and out. Rotation is sound active.

Master/Slave mode: Set the MASTER head to any of the STAND ALONE settings above and then connect up to 35 additional heads with DMX linking cables and set all SLAVE heads to have only dip switch #10 & #1 on (down). In this configuration, all heads will change patterns at the same time. (The mirror moves to sound independently on each slave unit.)